

Acme Partyworks

248-477-3327

313-600-8910 (emergency only)

FROZEN DRINK MACHINE

NOTE: ALL CONCESSION EQUIPMENT SHOULD BE OPERATED ON ITS OWN 20 AMP/110V CIRCUIT! IT'S RECOMMENDED THAT THE UNIT BE PLUGGED DIRECTLY INTO THE ELECTRIC OUTLET.

IMPORTANT: THIS MACHINE IS DESIGNED FOR INDOOR USE. IF USING OUTDOORS, KEEP OUT OF DIRECT SUNLIGHT. THE HIGHER THE TEMPERATURE AND HUMIDITY, THE MORE DIFFICULT IT IS FOR THE MIX TO FREEZE. FOR BEST RESULTS AND FOR A TIMELY MIX FREEZE, USE INDOORS. CONTENTS WILL NOT FREEZE OUTSIDE IF TEMPERATURE IS ABOVE 80 DEGREES.

WARNING: DO NOT ADD ICE CUBES OR ANY FROZEN MIX TO THE MACHINE

OPERATION INSTRUCTIONS

1. CAREFULLY PLACE UNIT UPRIGHT ON STABLE LEVEL SURFACE. DO NOT LAY UNIT ON ITS BACK OR SIDE AS DAMAGE TO THE COMPRESSOR MAY OCCUR.
2. CONNECT UNIT TO THE POWER SUPPLY (110 V 20 AMP GROUNDED CIRCUIT).
NOTE: BEFORE FILLING, ENSURE DISPENSING BOWL IS FULLY SEATED AND SEALED. (HINT: IF YOU ARE NOT SURE IF THE BOWL IS PROPERLY SEATED, YOU CAN TEST IT BY POURING IN SOME WATER FIRST.)
3. **ONCE AGAIN, AS A REMINDER, REMEMBER TO TEST WITH WATER TO MAKE SURE THE BOWL IS FULLY SEATED OTHERWISE YOU WILL LOSE YOUR FLAVORED SYRUP ONTO THE GROUND AND TABLE.** POUR THE ½ GALLON OF FLAVORED SYRUP INTO THE DISPENSING BOWL. FILL THE REST OF THE BOWL WITH WATER UP TO THE FILL LINE. (2 ½ GALLONS TOTAL MAXIMUM). DO NOT OVERFILL THE TANK. THIS UNIT CAN ALSO BE USED TO DISPENSE SODAS, GATORADE, APPLE CIDER, DRINK MIX, ETC. ONE SYRUP SERVES APPROXIMATELY 50 7oz SERVINGS.
4. IF ADDING ALCOHOL, EXCHANGE WITH ONE PART WATER (1/2 GALLON). YOU CAN ALSO ADD ALOCOHOL PER USER
5. TO OPERATE, PRESS MAIN POWER SWITCH AND AGITATOR SWITCH TO ON POSITION. NOTE: THE AGITATOR SWITCH MUST BE IN THE ON POSITION BEFORE SETTING TO SLUSH OR LIQUID MODE.
 - FOR SLUSH, PRESS THE COOLER SWITCH TO "SNOWFLAKE" POSITION.
 - FOR LIQUID PRESS THE COOLER SWITCH TO "RAINDROP" POSITION.
6. ALLOW 1 ½ TO 2 HOURS FOR THE PRODUCT TO FREEZE. IF YOU ARE OUTSIDE OR MIXING WITH ALCOHOL, ALLOW ADDITIONAL TIME.
7. TO DISPENSE THE PRODUCT, PULL THE DISPENSER HANDLE FORWARD GENTLY. USING TOO MUCH FORCE CAN BREAK THE DISPENSER.

*****CONTENTS WILL NOT FREEZE OUTSIDE IF TEMPERATURES ARE ABOVE 80 DEGREES*****

CLEANUP INSTRUCTIONS

NOTE: NO DISASSEMBLY REQUIRED.

1. TURN UNIT OFF AND UNPLUG FROM POWER SOURCE.
2. DRAIN MACHINE OF ANY LEFTOVER PRODUCT.
3. RUN COLD WATER THROUGH UNIT AND DRAIN.

******RENTER IS RESPONSIBLE FOR ALL DAMAGES******